



feather•friendly®

• for the prevention of bird collisions •

Residential Bird Collision Deterrent Marker-Pattern Tape Installation Instructions


Please read these instructions carefully before installation. Important Installation Notes:

Application Temperature: marker-pattern tape should not be installed at temperatures below 10°C or 50°F.

Will Not Damage Glass Surfaces or Exterior Glass Coatings such as Solar Reflective, Low-E, or other types of glass treatments.


Marker-pattern Tape coverage: One 100 ft. roll protects a glass surface (2'.5 x 6'.5 feet) or (30" x 80" inches) or (16 square feet) of glass patio door, glass panel railing, or equivalent window area.

Bird Collision Deterrent Marker-Pattern Tape Installation Steps (1-6)

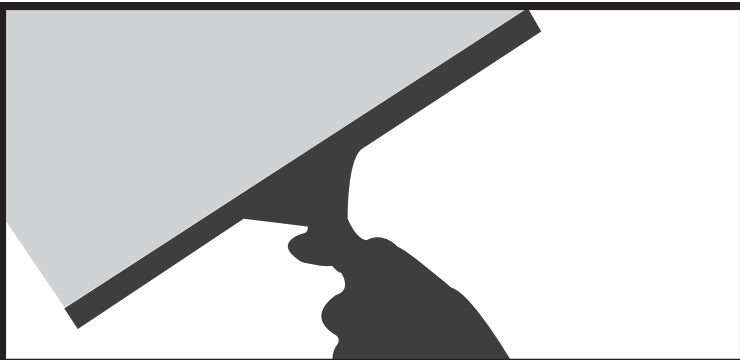


STEP 1

For maximum effectiveness, apply to the **exterior side** of glass surfaces. Clean the **exterior side** of window (or glass surface) using a solution consisting of 50/50 Water and Rubbing Alcohol. You may also use a commercially available window cleaner that does not leave a residue. **Dry glass surface completely before beginning installation.**

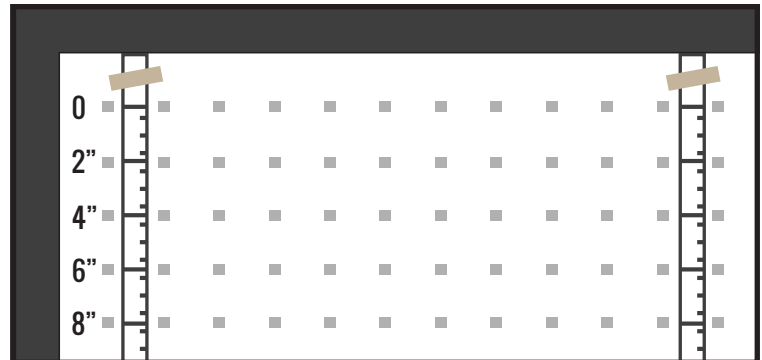

STEP 2


Position the **beginning end** of the paper measuring tape at the top edge of the window frame or glass surface you are treating. Fix it in place at the **top and bottom** with a piece of ordinary tape (or equivalent). **Repeat** on the opposite side of the window **using the second paper measuring tape**. The paper measuring tapes should be positioned so that you can apply the **first row** of marker tape **level** (from left to right) and 2" from the top of the window frame.

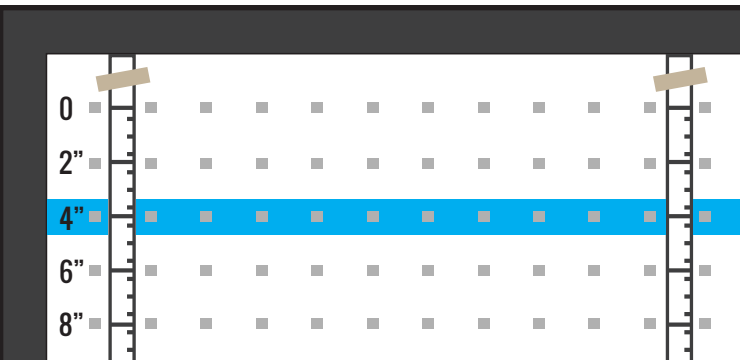

STEP 3

Unroll using a smooth and consistent technique. Cut a length of Feather Friendly® marker-pattern tape slightly larger than the width of the window. Pass the marker-tape **under** the paper measuring tape. Align the **centre** of the marker-pattern tape with the **first measuring mark** (zero inches) on the measuring tape. This mark is 2" from the **beginning end** of the measuring tape. Centre the tape so that the first and last marker is roughly the same distance from the edge of the window frame on the right and left side.

Pull the **marker-pattern tape** taut and stick it in position at both ends. The first row of markers will now be 2" below the top edge of the window frame or glass. Run your thumb along the marker-pattern tape lightly and adhere it to the glass.

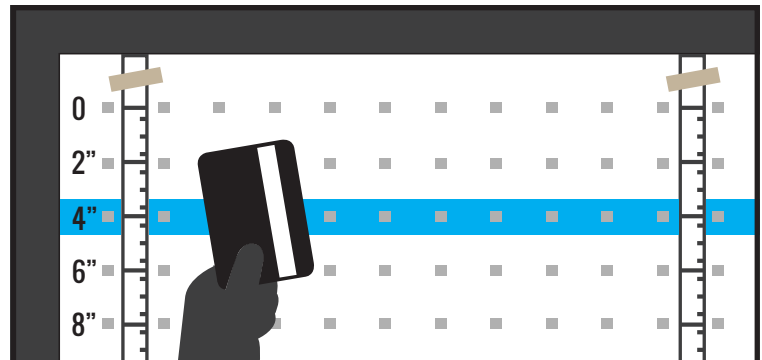

STEP 4


Further affix the markers by running a credit card or equivalent **across each marker** a few times to release trapped air and activate the **pressure-sensitive adhesive**. Maintain a **slow and consistent technique** when peeling off the marker-tape backing, **keeping it flat against the glass while leaving markers in place**. If any markers peel off, run the card across the marker backing tape again. **Individual markers may also be replaced at any time using the same procedure.**



feather•friendly®

• for the prevention of bird collisions •


Residential Bird Collision Deterrent Marker-Pattern Tape Installation Instructions

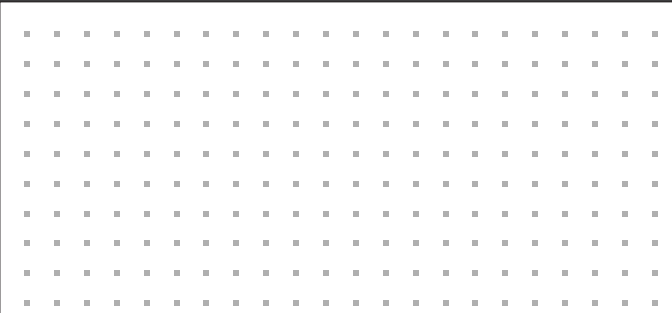


STEP 5

After you have applied the first row of markers, repeat steps 3 and 4 for every row until **Feather Friendly Residential®** completely covers the glass surface. Each row of markers will be 2" apart (e.g. **first row will be at 0"**, **second row 2"**, **third row 4"** etc.)

Cleaning Instructions:

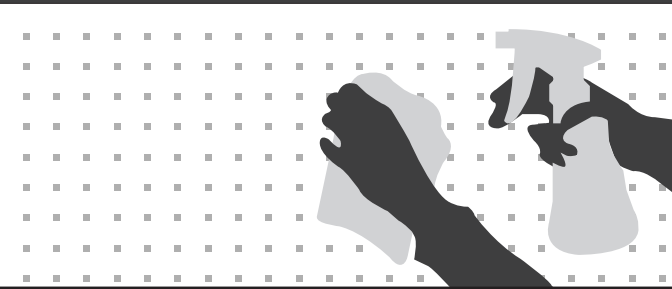

If cared for properly, Feather Friendly marker-patterns are designed to be effective and adhere to glass surfaces for many years. Window cleaning products such as Windex, or mild liquid detergent and water mixtures may be used to clean glass surfaces without damaging the marker-pattern. A soft cloth or synthetic sponge are the recommended washing tools. **Do not apply heavy scrubbing pressure. Hard rubber squeegees and power-washing machines will damage marker-patterns and are not recommended.**

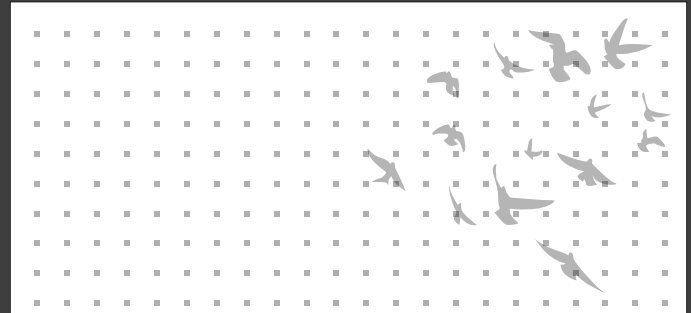

STEP 6

Congratulations! You are now protected from bird strikes. Enjoy our **Feather Friendly Residential® Bird Collision Deterrent Marker-Pattern Tape.**

Notes:
